

This ID Proxy Reader can save 2720 ID Cards/Key Fobs.

Initial Setup:

1. Power off door panel.
2. Connect JP2 on RFID Reader on door panel.
3. Power On door panel and you will hear a long beep.
4. Default Admin password is :1234
5. Remove Jumper to continue programming.

To Enter Infrared Remote Controlling:

1. Press "*" then admin password (default is 1234) and you will hear a long beep.
2. Press "*" then 5 and you will hear a long beep.
3. Enter 10 digit serial number of access card or key fob, then press "#", and you will hear a long beep.
4. Press "EXIT" button to exit remote control operations.

Change Admin Password:

1. Press "*" then admin password (default is 1234).
2. Press "*" then 2 and a long beep will sound.
3. Input new four digit password and press "#"
4. Press "EXIT" button to exit infrared programming.

Set Unlock Time for Door Panel:

1. Press "*" then admin password (default is 1234).
2. Press "*" then 7 and you will hear a long beep.
3. Enter your 3 digit time (maximum # is 255).

To Delete a Fob:

1. Press "*" then admin password (default is 1234).
2. Press "*" then 3 and you will hear a long beep.
3. Swipe the fob.

OR

1. Press "*" then admin password (default is 1234).
2. Press "*" then 5 and you will hear a long beep.
3. Enter the 10-digit ID number and press "#"